

The Camberley Operation

Using the Camberley

The Camberley features a standard USB button control system. This is located on the side of the armrest.

Please note if you prefer a hand remote please contact your authorised Pride® Mobility retailer (please note this will be an additional charge and cannot be used in conjunction with the USB remote).

USB Control Operation Method



1. Top left -returns backrest
2. Bottom left -reclines backrest
3. Top right -returns footplate and raises chair
4. Bottom right -reclines footplate
5. USB Charging slot
(IMPORTANT 'Please remember to unplug any USB cable once charging of your devise is complete.'

